



RETRACTABLE EXTENSION CORD REEL, 45-FOOT

Thank you for selecting this quality Griot's Garage product. Your **RETRACTABLE EXTENSION CORD REEL** features 45 feet of premium quality, grounded electrical cord to add convenience to your garage!

PLEASE READ ALL INSTRUCTIONS & SAVE FOR FUTURE REFERENCE

INSTALLATION

MOUNTING LOCATION

- Mount reel so that the 3 foot male power cord can easily reach a grounded outlet.

MOUNTING HARDWARE:

- Choose fasteners suitable for the mounting surface, the weight of the reel, and the force of pulling the cord. Use fasteners up to $\frac{1}{4}$ " in diameter.
- The included fasteners are intended for mounting to wood such as a wall stud. If you wish to mount the **RETRACTABLE EXTENSION CORD REEL** on a different type of surface, different anchors and fasteners may be required.

WALL MOUNTING INSTALLATION:

1. To install via the removable mounting bracket, simply slide the bracket off of the reel's permanently attached swiveling bracket. Note the removable bracket has a protruding tab; the reel rests against this tab. Identify your preferred mounting location and center the bracket on it. Using the holes in the bracket, mark mounting points on the mounting surface using a pencil. A leveling device is recommended for this step.
2. If using supplied hardware, set bracket aside and drill a pilot hole with a $\frac{1}{8}$ " drill bit into mounting surface at the points you marked.
3. Center bracket again on mounting surface, being sure that the protruding tab is at the base of the bracket and install hardware to secure the bracket to the wall.
4. Slide the reel and its swiveling bracket into the guide rails and onto the tab of the wall-mounted bracket.
5. Connect male power cord end to your grounded wall outlet and ensure the red power indicator light on the tri-tap female end illuminates. Your reel is now ready to use.

OPERATION

- Your **RETRACTABLE EXTENSION CORD REEL** can lock the cord at approximately 18-inch intervals. Each latching interval is announced by a series of clicks. This ratcheting sound lets you know the reel is in the latching zone. After pulling out the desired length of cord, listen for the ratcheting sound and then stop pulling. The reel is now latched.
- To ensure safety, once desired length of cord is achieved and reel latched, turn the manual lock on the housing of the reel to on. This will prevent unwanted retraction of the cord should it get pulled out of the ratcheting zone during use.
- To retract cord, turn manual lock back to off. Pull cord outside of the ratcheting zone to release the latch, then continue to hold cord and allow to gently retract back into the reel. The reel will continue rewinding until the cord is fully retracted. Do not allow the cord to retract uncontrolled back into the reel, as personal injury could result.
- To modify the cord stopper, pull out cord to the desired length and latch reel. Loosen screws holding the two halves of the hose stopper together, slide stopper to opening of reel and then re-tighten screws.
- Your **RETRACTABLE EXTENSION CORD REEL** is equipped with a 16-amp circuit breaker to prevent damage from a power overload. To reset the circuit, simply press the red button on the side of the reel housing until it clicks.
- Before each use, inspect for frayed or damaged wires or damaged cord jacket. Do not use if cord is damaged.

(Continued on back)

- After each use, always return the cord to the reel in a controlled manner and disconnect tools from cord. Do not allow tools to hang from cord.
- To ensure smooth operation, clean the cord jacket from time to time with a mild cleaning product such as Griot's Garage Interior Cleaner and a microfiber cloth.

CAUTIONS & WARNINGS

WARNING: To avoid personal injury DO NOT attempt to disassemble cord reel. No service parts are available. DO NOT attempt to repair cord reel; replace if damaged or contact Griot's Garage if defective.

CAUTION: Read all instructions and warnings before using the Griot's Garage **RETRACTABLE EXTENSION CORD REEL**.

CAUTION: Inspect cord before each use. Do not use if cord is damaged. Do not kink, twist, knot, or abrade cord. Do not wrap cord around body. Keep cord away from hot surfaces and/or chemicals. **KEEP CHILDREN AWAY FROM WORK AREA!**

SAFETY INSTRUCTIONS

Do not allow tools to hang on the end of cord when not in use. Do not allow cord to contact hot, sharp, or heated surfaces that could damage it. Always retract cord back into reel in a controlled manner when work is completed.

ANSWERS TO YOUR QUESTIONS

Should you have any comments or questions about the use of your **RETRACTABLE EXTENSION CORD REEL** (13083), our Customer Service Department can be reached by phone at 800-345-5789 or by email at info@griotsgarage.com. For a complete selection of products or to receive a free Griot's Garage Handbook, please call us or visit us at griotsgarage.com

Have fun in your garage!®

GRIOT'S GARAGE, INC.
3333 SOUTH 38TH STREET
TACOMA, WA 98409
800-345-5789
griotsgarage.com

© GRIOT'S GARAGE, INC.